

Align Height Adjustable Desk




Step 1

Plug the power cord into an AC outlet.

Step 2

General operation to move the desktop up and down.

digital handset control -
general operation &
setting memorised positions

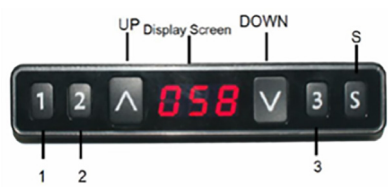

Operation	Motion
Press and hold ^	Legs move up
Release	Legs stop
Press and hold v	Legs move down
Release	Legs stop

Step 3

Three memory positions are available for set heights of preference. **Setting the memory positions.**

Operation	Motion
Press and hold v or ^	Run the legs to the desired table height position
Click button S, then click button 1, 2, or 3 within next 3 seconds.	Position 1, 2 or 3 is saved

Step 4

Move to the memorised desk height positions.

Operation	Motion
Press and hold the button 1, 2 or 3	Legs return to the corresponding position saved

Toggle the display unit format. In inch format, the minimum height variation as the legs moves up or down is 0.5 inches, while in centimetre format is one centimetre.

Operation	Motion
Press and hold button S, then press and v hold, keep for about 3 seconds	The height information will be changed between centimetres and inches
Release the buttons	Completed

Align Height Adjustable Desk

Lock the stroke- legs are not able to run below the locked position

Memory position(s) are/is below the locked position will be lost even after the table is unlocked, you need to follow **set memory positions** again to reset these memory positions.

Operation	Motion
Press and hold ∇ or $\wedge$, then release	Put the table at the desired height
Press and hold button S, then press and hold 1, keep for about 3 seconds	Letter "L" is indicated on the screen. That means the position is locked at the lowest position that the table can be moved to
Release the buttons	Completed

Unlock the stroke

Operation	Motion
Press and hold button S, then press and hold 2, keep about 3 seconds	Letter "C" is indicated on the screen. That means the table is unlocked and can be moved in full range.
Release the buttons	Completed