



## Supplied Components:

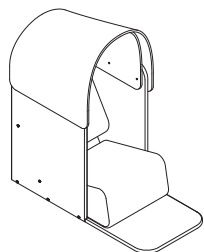


x1 Hideaway Hut




x6 Cross Dowel

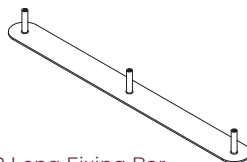

x2 Long Fixing Bar

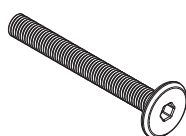


x18 45mm Bolt



x6 20mm Bolt

## Tools required:

- Flat head screwdriver
- Hex head driver/alan key
- Hammer/mallet

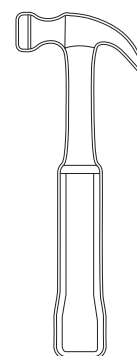

## Before Starting:

- Insert all cross dowels into machined holes (using hammer if required)
- Using a screwdriver align cross dowels in center of hole
- Partially thread screws into cross dowel to check these are aligned



## Assembly instructions:

1

Tip base on its end. Place sides with back rest fastening holes drawing a line to the right.





Fix sides to base using x6 cross dowels & x6 45mm bolts.

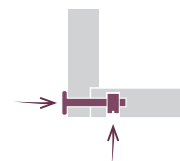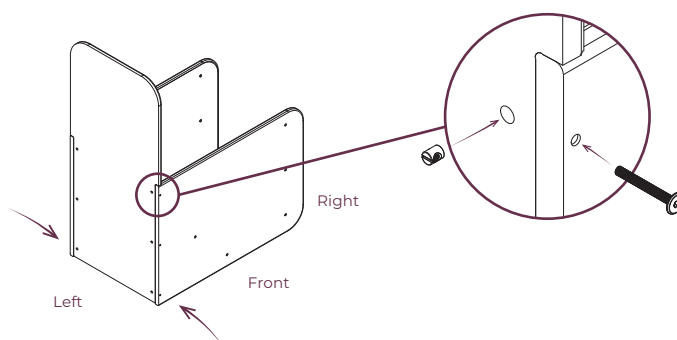

2



Position the back so it aligns with the fixing holes on the sides.

Using x4 45mm bolts, fasten it into the cross dowels already installed in the back plate.

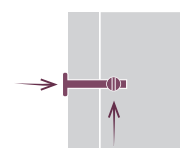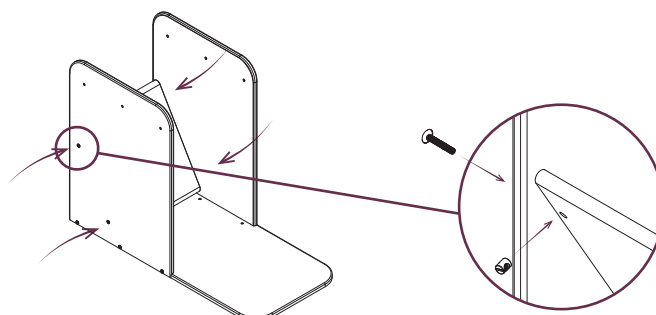



- 3** Position outer and inner roof either side of the wall with the grooves facing towards the middle.

Slide the fixing bar through the fixing holes & secure using x3 20mm bolts.

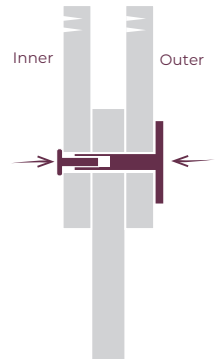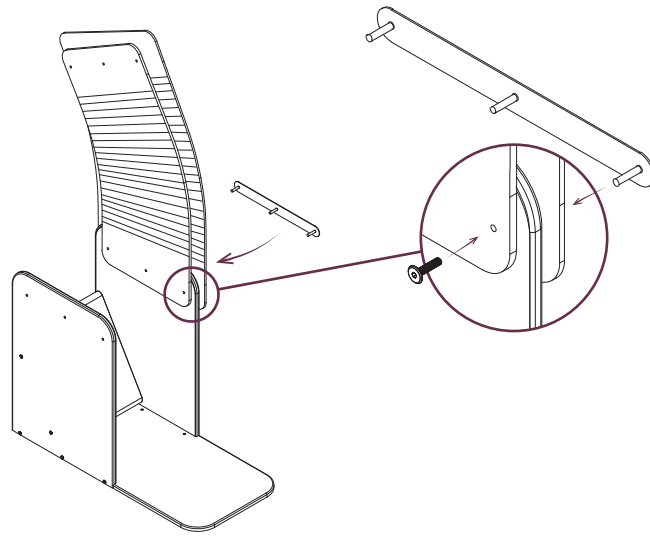

- 4** Fold the Inner and Outer roof over & position either side of the wall.

Slide the fixing bar through the fastening holes & secure using x3 20mm bolts.

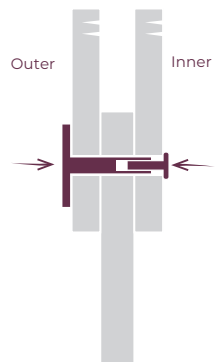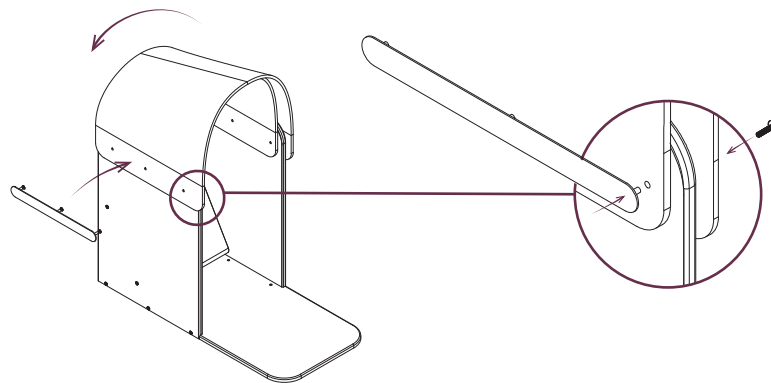

- 5** Slide seat into place inside the hood.

